


RED GUM **Deluxe** SPLITTER

Owner's Manual

Operating Instructions for
RedGum Deluxe Model

POWERED by
HONDA™

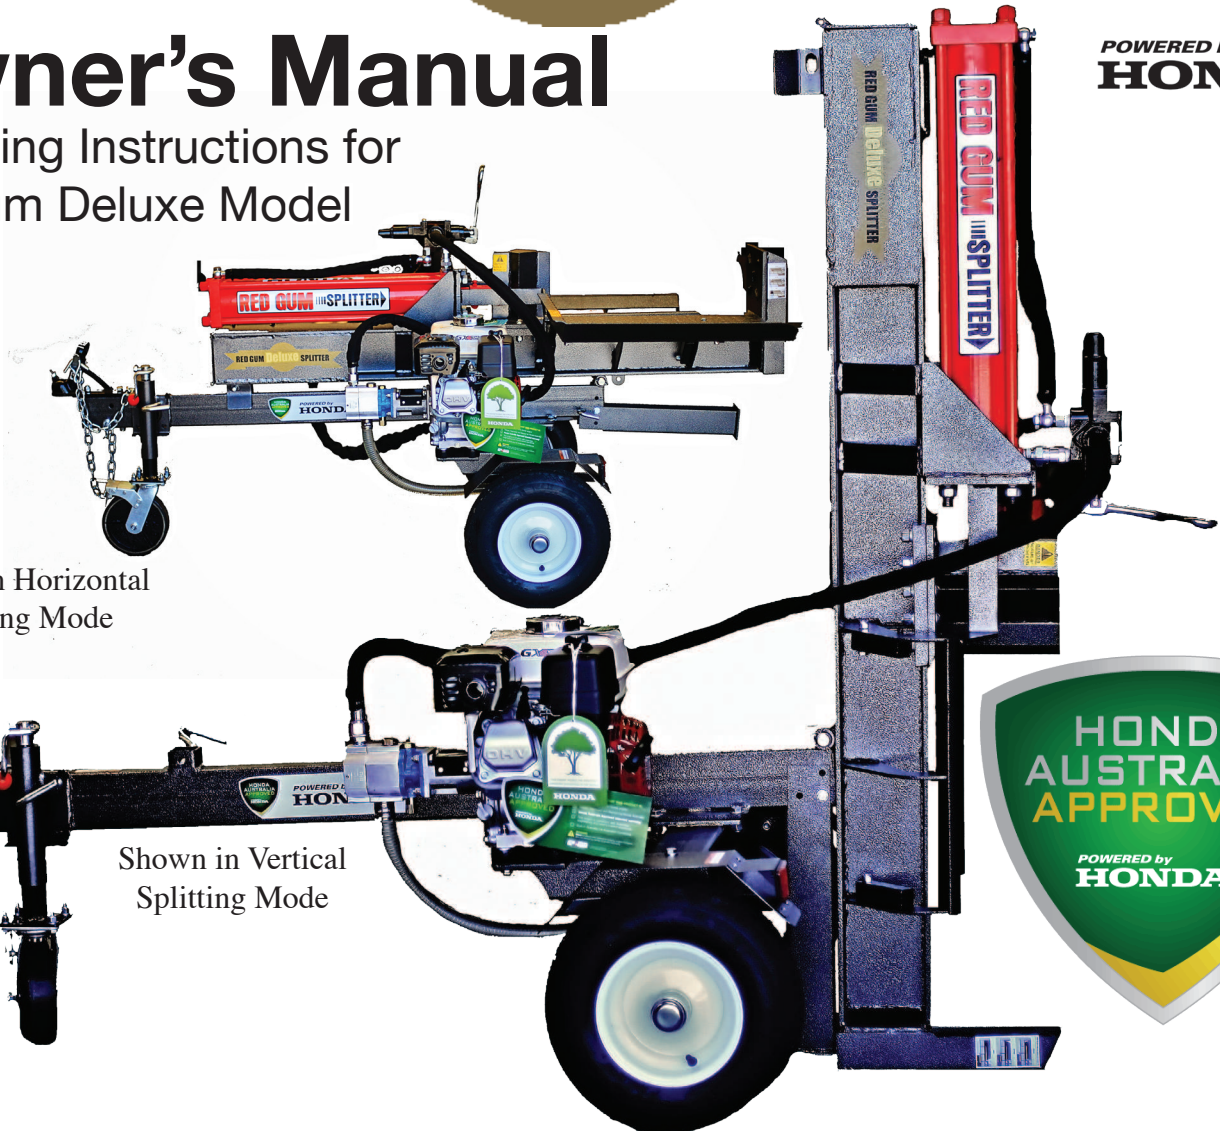

Shown in Horizontal
Splitting Mode

Shown in Vertical
Splitting Mode

REDGUM **SPLITTERS**

Australia's No.1 Selling Honda Powered Log Splitters

Product Description & Intended Purpose:

This Log Splitter / Wood Splitter is an outdoor product that splits wood logs for use as fuel in a fireplace or a woodstove.



WARNING: All operators must read this manual,
before operating this RedGum Splitter.

WARNING

Read and thoroughly understand all instructions contained in this operations manual before operating the RedGum Splitter.

Serious injury or death can result if safety instructions are not understood or followed. If you wish to discuss this log splitter's operational procedures after reading this manual, please call our customer service personnel on 1300 039 251. Monday -

Hazard Signals Definition



This is the **safety alert symbol**. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in serious injury or death.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, will result in serious injury or death.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

Table of Contents

Important Safety Rules..... 4-5

Operation Instructions 7

 Proper Operation of the Log Splitter 7

 How to split a log with slanted surface..... 8

 Horizontal & Vertical Operating Modes 9

 Vehicle Towing of the Log Splitter10

Log Splitter Components11

Log Splitter Troubleshooting 12

Maintenance and Storage13

Engine Components & Specifications..... 14

Notes 15

Accessories 16



Important Safety Rules



WARNING



1.) Read this manual completely.

- Serious injury or death can result if safety instructions are not followed.
- Everyone who operates this log splitter must read and completely understand all safety rules, operating instructions, and maintenance instructions.
- You must be 18 or older to operate this machine and in sound mind, free of the influence of medication, drugs or alcohol. Keep untrained people away.



2.) Crush hazard.

The Crush Hazard Zone is between the splitter wedge(5) and the end plate(18). Wedge(5) can cut through skin and break bones. Make sure hands are clear of crush hazard zone when log splitter is in operation.



3.) Flying objects.

- Pieces of log may fly out while splitting. Wear safety glasses. Serious eye injury can occur if safety glasses are not worn.
- Serious accidents can happen when other people are allowed inside the safety and operator zone. Keep everyone else out of the safety and operator zone while operating log splitter. See page 7 for operator zone.



4.) Skin injection hazard.

- High pressure fluid can inject under skin resulting in serious injury including amputation.
- If skin injection happens, seek immediate "Surgical Treatment". Call 000
- Make sure all fittings are tight before starting the log splitter. Relieve system pressure before servicing by turning off the log splitter and moving control valve lever(4a) forward and back and returning to neutral position.
- Do not check for leaks with hand. Instead, use a piece of cardboard to check for leaks.



Important Safety Rules (continued)



WARNING



6.) Risk of fire and explosion.

Hot exhaust fumes from engine can cause fire. Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Position muffler at least 7 feet from combustible objects.
- Before adding fuel, stop the engine and keep heat, sparks, and flame away. Do not add fuel when engine is running or still hot. No smoking near engine.
- Do not pump fuel directly into engine at gas station. Static charge can build and ignite fuel. Use an approved fuel container to transfer petrol to the engine. Wipe up fuel spills immediately.
- Store and handle fuel outdoors. Gasoline vapors can ignite if they collect inside an enclosure. Explosion can result.
- Do not change or add to exhaust system. Fire can result.
- Do not change or add fuel tanks or fuel lines. Fire can result.
- Before each use, check fuel tank and fuel lines for leaks. Any fuel leak is a fire hazard. Fix any fuel leaks before starting engine.
- During transportation take precautions to make sure machine will not tip over and cause a fuel leak and fire hazard. Engine fuel lever should be turned to off while transporting this log splitter.

7.) Breathing hazard.

Poisonous fumes from engine can kill you. Do not operate indoors even if ventilated. This product is for outdoor use only.

8.) Hot muffler.

You can be burned by muffler. Do not touch muffler during or immediately after use.

WARNING

Read & thoroughly understand the following Operational Warnings before operating this RedGum Log Splitter.

Operational Warning

- **Intended purpose:** This product is designed as an outdoor product to split wood logs to use as fuel in a fireplace or a woodstove. Never use the log splitter for any other purpose than splitting wood.
- **Always place logs** so the axehead splits with the wood grain and not across the wood grain.
- **Personal Protective Equipment:** Safety glasses are required to be worn at all times. It's also recommended to wear 1. Ear Muffs 2. Steel capped boots 3. Tight fitting gloves.
- **ALWAYS wear suitable clothing**, free from hanging strings, jewellery or other items that could get caught up in moving parts. If you have long hair make sure it is tied back and kept out of the way of moving parts.
- **ALWAYS inspect log splitter before using** to ensure it is in good working condition.
- **Replace or repair damaged or worn parts immediately.**
- **ALWAYS check and tighten hardware and assembled parts before operation.**
- **ALWAYS operate log splitter on firm, clear and level ground**
- **ALWAYS set up a SAFETY ZONE** restricting onlookers to at least 3m away from the log splitter when in use.
- **ALWAYS remove split wood from around the log splitter immediately after it's split** into smaller pieces so that you don't stumble over it.
- **Do NOT exceed equipment maximum splitting capacity by altering component settings.**
- **Do NOT operate the log splitter at night, only during daylight hours.**
- **Shut engine off before leaving log splitter unattended.**

Keep this operations manual for future reference and re-read this manual periodically.

Operation Checklist

RedGumSplitters are assembled and ready for use however,

- **Check** Hydraulic Oil levels with a Dipstick
- **Check** engine oil level by sighting engine dip stick.
- Closely **inspect** all log splitter components. If you sight damaged components then contact your RedGum dealer before use.
- **Always wear safety glasses** while operating this logsplitter. It's also recommended to wear 1. Ear Muffs 2. Steel capped boots 3. Tight fitting gloves 4. Suitable clothing

OPERATION INSTRUCTIONS

Proper Operation of the Log Splitter.

- 1.) Always follow Operational warnings & checklist(refer page 6).
- 2.) Load a log onto the beam (7) and against the end plate (18). (See next page for instructions on splitting logs with a slant or uneven surfaces) However log should be cut as square as possible to fit properly on to the splitter and firmly against the end plate (18).
- 3.) Serious accidents can happen when other people are allowed inside the OPERATOR ZONE (see diagram below). Keep everyone out of the operator zone while operating the log splitter.
- b.) ALWAYS set up a SAFETY ZONE restricting onlookers to at least 3m away from the log splitter when in use.

4.) Start Engine by using the following instructions:

- a. Turn the engine switch to 'ON' position.
- b. Slide the choke lever away from the fuel tank to activate the choke.
- c. Turn the fuel tap on.
- d. Raise the engine revs by sliding the throttle lever away from the fuel tank. Always use full throttle when using this machine.
- e. Pull the starter cord handle lightly until resistance is felt, then pull briskly.
- f. When the engine starts to run, deactivate the choke by sliding the lever towards the fuel tank.
- g. CAUTION Do not let go of the starter cord and allow it to snap back.



5.) Start the splitting procedure by pushing and holding the control valve handle (4) FORWARD.

⚠ WARNING The Crush Hazard Zone is between the splitter wedge(5) and the end plate(18). Make sure hands are clear of crush hazard zone.

- a. To return wedge to starting position simply pull the control valve lever (4a) backwards and away from the end plate (18). Please note that the splitter wedge(5) only moves forward when you are holding the lever forward. When you let go of the control lever(4a) the splitting wedge should stop.
- b. Please note the splitting wedge returns back to the original starting position automatically. You must ensure control lever(4a) returns to the neutral position after the splitting wedge has returned to it's original starting position.
- c. For safety reasons, the wedge(5) stops approx. 3-4cm from the endplate(18). To avoid hydraulic pressure build up please refrain from holding the control lever (4a) forward after the wedge has reached the end of it's travel.

7.) Clear the split wood from the operator zone.

8.) Repeat above steps as required.

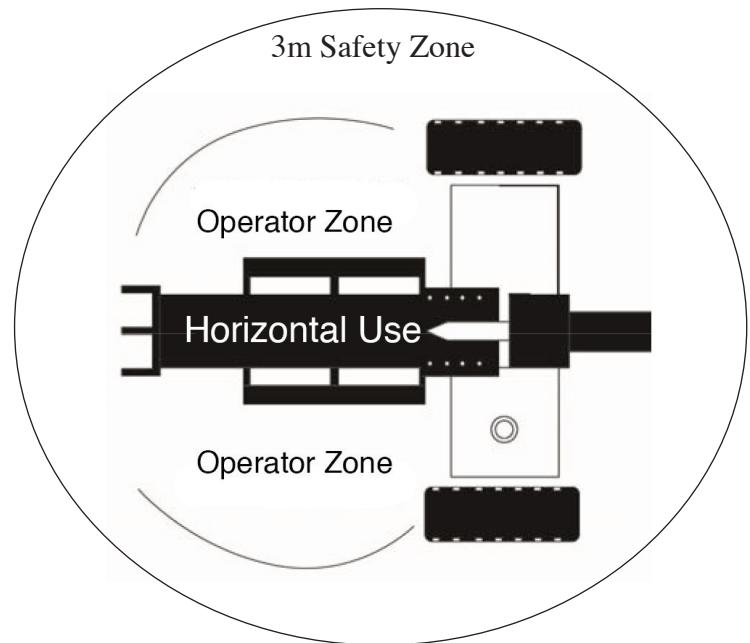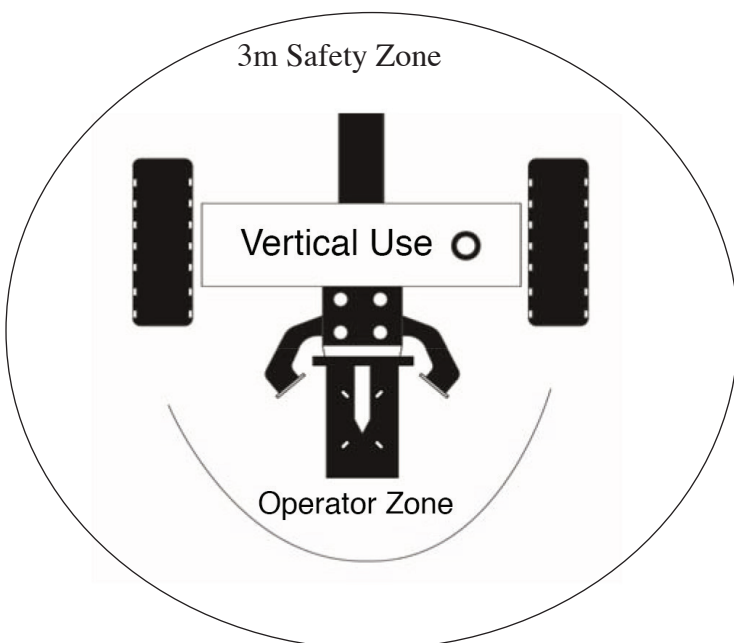


OPERATION INSTRUCTIONS (continued 2)

How to split a log with slant(or uneven) surface

Correct operating procedures are required to ensure your RedGum logsplitter is not damaged. Incorrect operation can result in bending the beam(7) and/or end plate(18). Important: If beam or end plate are bent due to incorrect operation, it is not a manufacturers fault and subsequently is not covered under warranty.

Ideally the log should be cut into “rounds” with flat or even surfaces. If they are cut and the edges are on an angle or have an uneven surface, you must ensure you place the log onto the beam(7) as shown in the diagrams BETTER or BEST below.

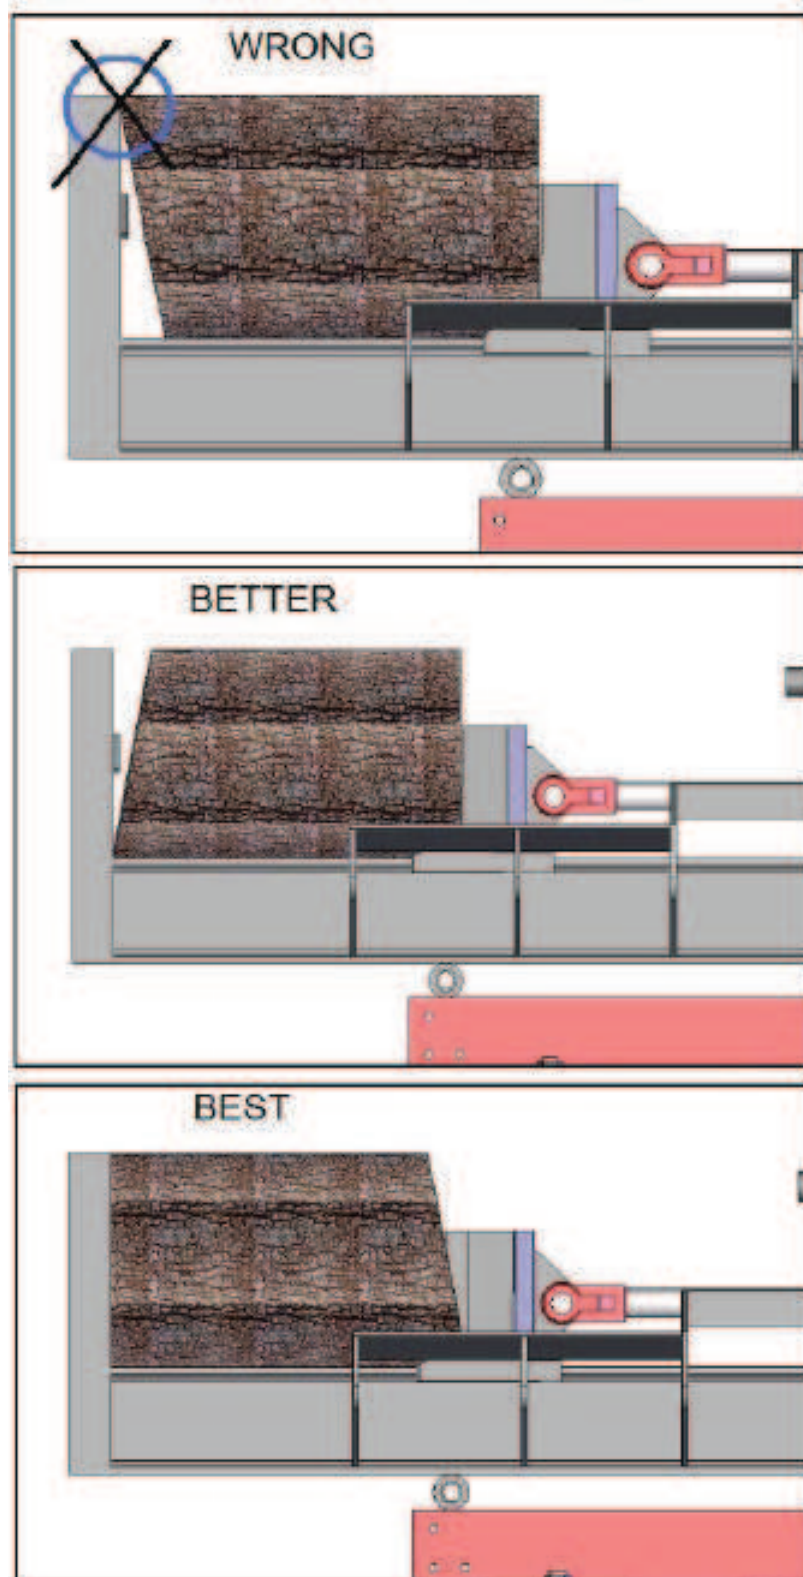


OPERATION INSTRUCTIONS (continued 3)

For Horizontal Use:

WARNING


Important: Note position of “locking pin tab”. This is required for vertical operation.

Rotate rear leg down and slide the lock pin into top hole to lock rear leg into place.

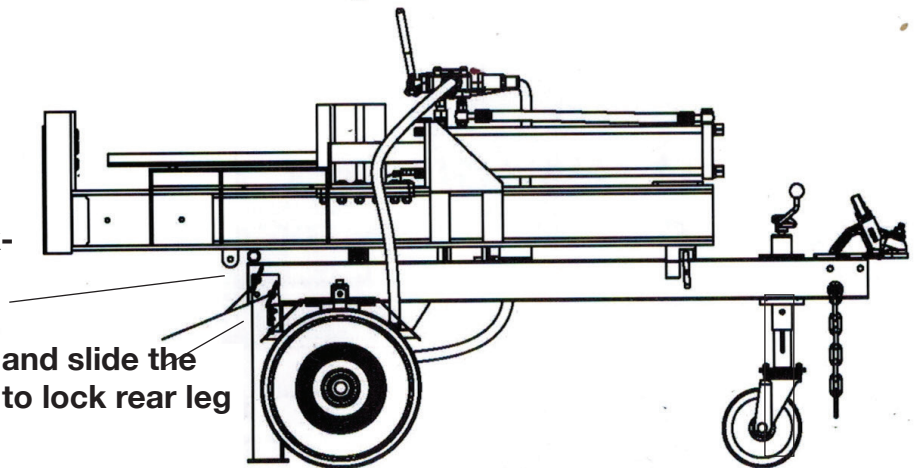

CAUTION When converting the log splitter from horizontal to vertical use and/or returning to horizontal from vertical operation, the rear leg must be secured in downwar with locking pin to prevent the tow bar from snapping up.

Image shows rear leg lock down

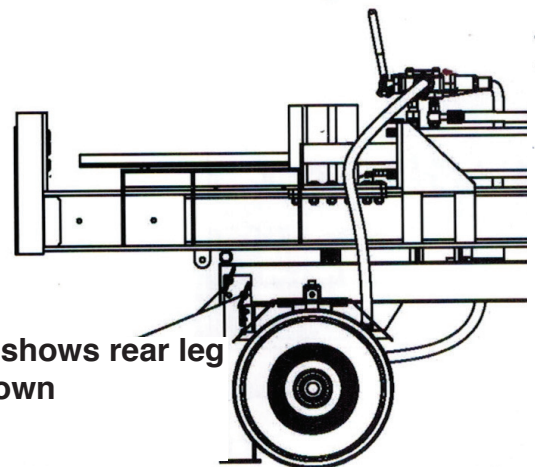


For Vertical Use:

WARNING

Remove the work table before operating in vertical mode.

WARNING

To secure beam in vertical position you **MUST** place the pin through the top hole of the rear leg AND through the “locking pin tabs” on the back of splitting beam as shown on horizontal use diagram.

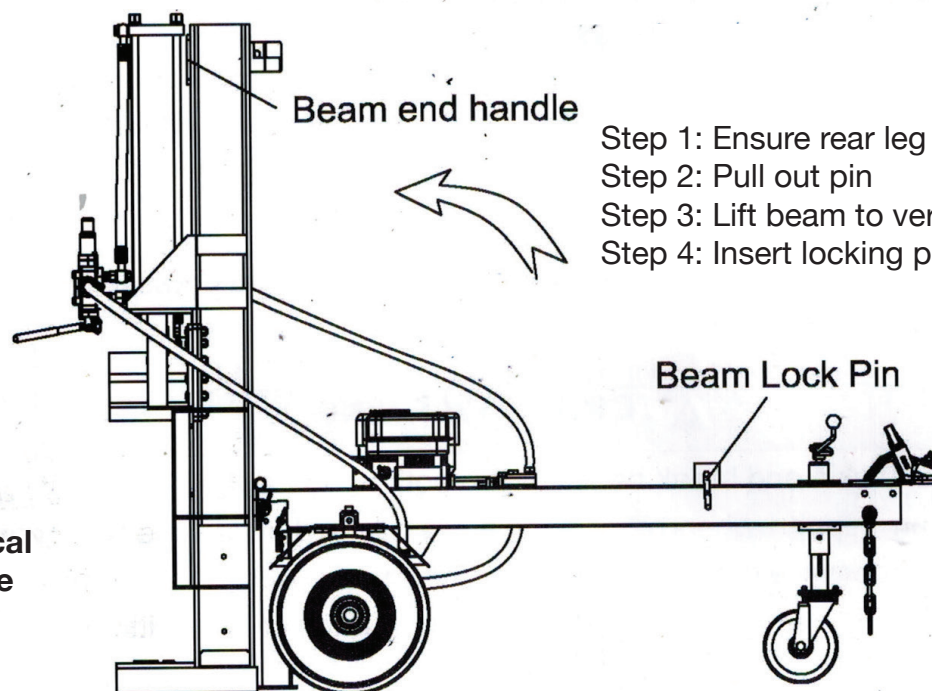


Step 1: Ensure rear leg is down
Step 2: Pull out pin
Step 3: Lift beam to vertical
Step 4: Insert locking pin

Towing the log splitter:

1a.) Ensure log splitter is secured in horizontal mode. (See 1b & 1c)

2.) Ensure log splitter tow hitch is locked onto vehicle tow ball.

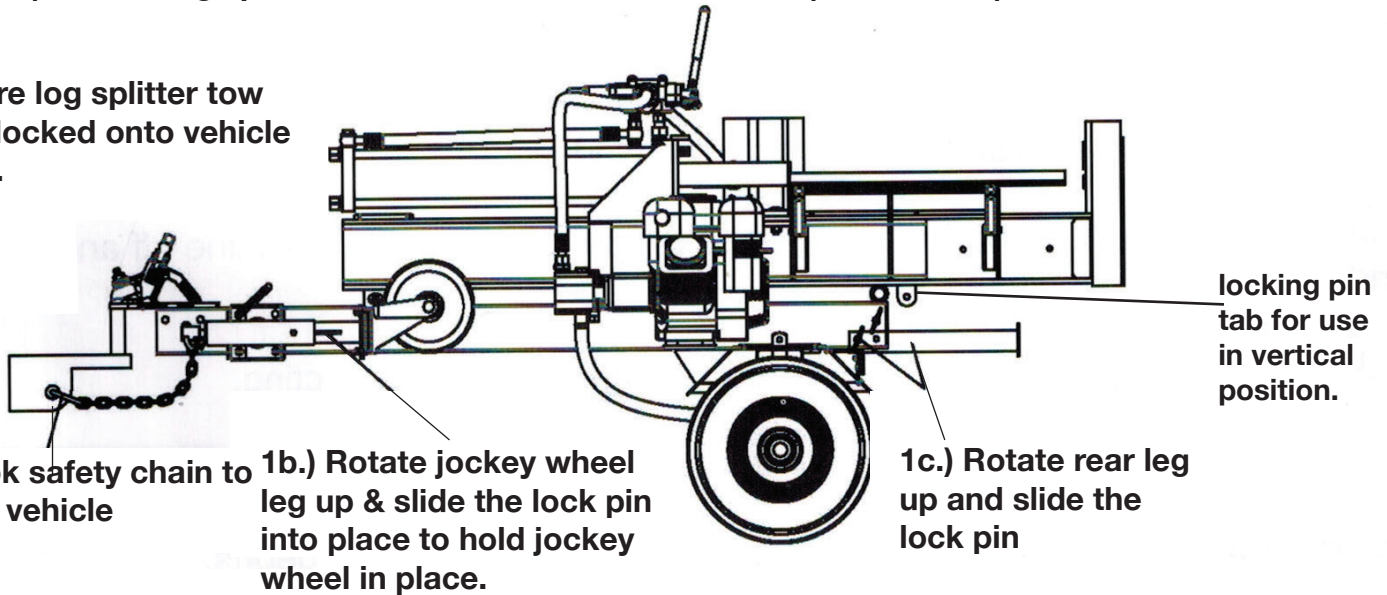

Remember to turn the engine fuel tap off prior to towing to prevent flooding of the engine.

Warning: Towing incorrectly is a serious risk and can result in serious injury or death. Please read Towing Warnings below:


WARNING

Towing Warnings:

Remember to turn the engine to the off position prior to towing and turn off fuel tap.

- Serious injury or death can occur if towing safety rules are not followed.
- Review towing safety warnings in your towing vehicle manual.
- Drive safely. Be aware of the added length of the log splitter adds to your vehicle.
- Never ride or transport cargo on the log splitter.
- ALWAYS secure and lock the log splitter to the vehicle hitch before towing.
- Drive the vehicle only after the log splitter is securely attached.
- Turn off the vehicle before leaving the log splitter unattended.
- Choose a level surface to operate the log splitter.
- Block the log splitter wheels to prevent unintended movement.
- Never tow or operate this splitter while under the influence of alcohol, drugs, or medication. AVOID large holes and ditches when towing the equipment.
- ALWAYS tow at reduced speed on rough or uneven terrain, along creeks, ditches and on hillsides.
- To AVOID personal injury and/or equipment damage DO NOT EXCEED 45 km/h.

LOG SPLITTER COMPONENTS

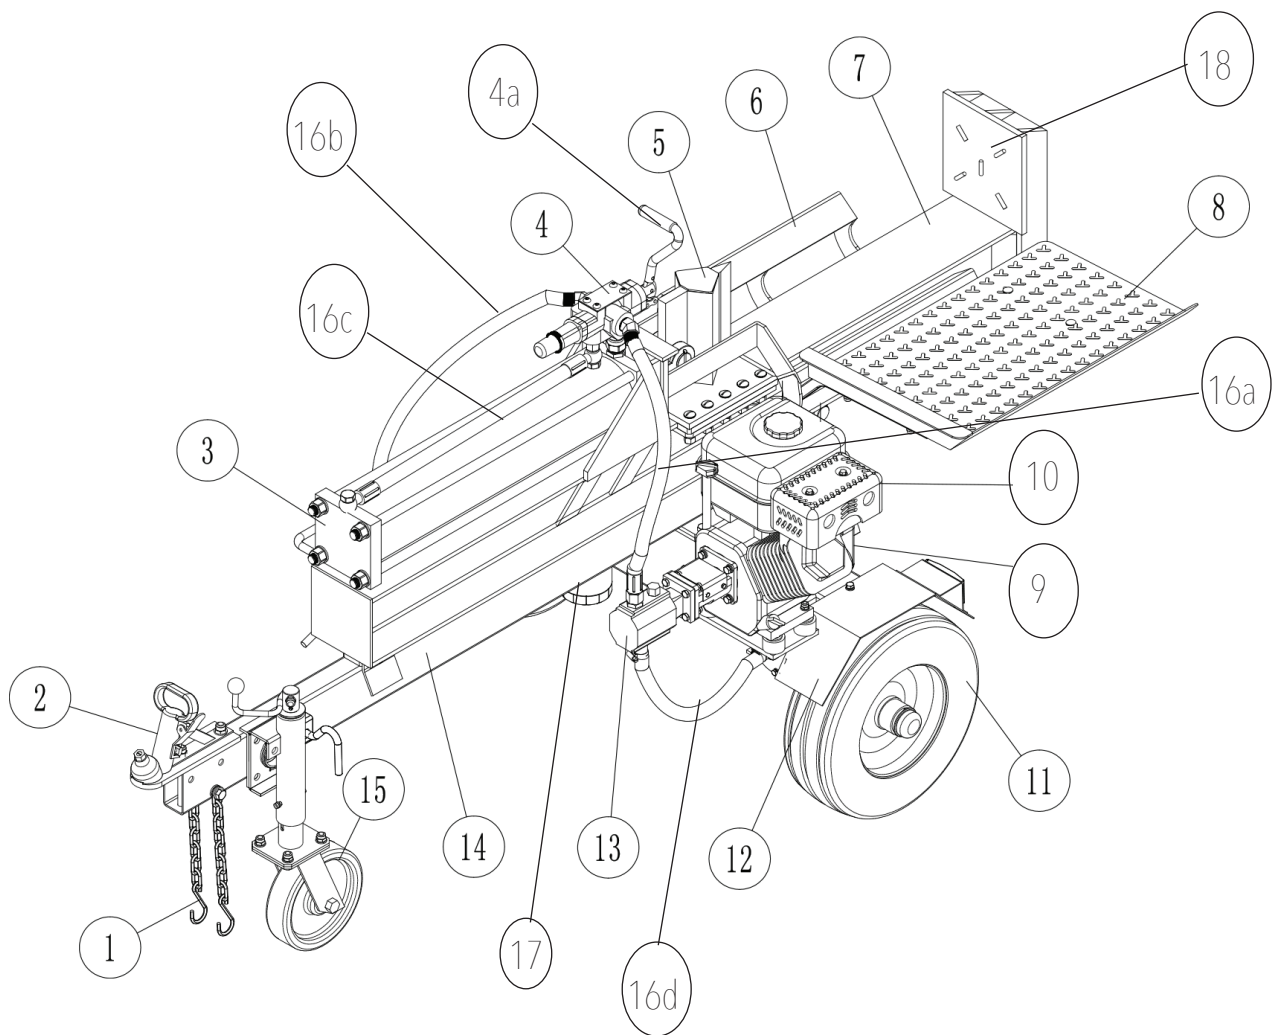

- 1.) Safety Chains. A safety feature to prevent loss of log splitter while towing.
- 2.) 50mm Trailer Coupler. Attaches to your vehicle. Fits standard 50mm hitch balls.
- 3.) Hydraulic Cylinder. The Hydraulic cylinder has a 4 ½" bore, 22¾" stroke.
- 4.) Control Valve. 4a.) Control Valve Handle. Use the control valve handle to move the Splitter wedge slide forward and backward.
- 5.) Splitter Wedge. The splitter wedge features wings and a taper that makes splitting easier.
- 6.) Log Cradle. Keeps the log on the beam without operator assistance.
- 7.) Beam. The beam is made of 6" wide flange beam (also called I-Beam) and is reinforced.
- 8.) Work Table. Maximum load 20Kg.
- 9.) Engine. The air cooled Honda GX200 engine powers the hydraulic pump.
- 10.) Rear Support Leg.
- 11.) Wheel/Tyre. Maximum rated speed is 45 km per hour.
- 12.) Fender.
- 13.) Two Stage Hydraulic Pump. Makes the hydraulic oil flow through the system.
- 14.) Tow Bar.
- 15.) Swing Jockey Wheel. For easy manoeuvrability.
- 16.) Hydraulic Hoses. a.) Inlet Hose, b.) Outlet Hose, c.) Cylinder Hose, d) Oil pipe
- 17.) Hydraulic Oil filter to increase the service life of the log Splitter components
- 18.) End Plate

LOG SPLITTER TROUBLESHOOTING

Problem	
Cylinder rod & splitting wedge will not move	Solution: A, D, E, H, J
Slow cylinder shaft speed when extending or retracting	Solution: A, B, C, H, I, K, L
Wood will not split or splits extremely slowly	Solution: A, B, C, F, I, K
Engine bogs down during splitting	Solution: G, L
Engine stalls under low load condition	Solution: D, E, L, M

Cause	Solution
A - Insufficient oil to pump	Check oil level in reservoir
B - Air in oil	Check oil level in reservoir
C - Excessive pump inlet vacuum	Check pump inlet hose for blockage or kinks
D - Blocked hydraulic lines	Flush & clean the splitter hydraulic system
E - Blocked control valve	Flush & clean the splitter hydraulic system
F - Low control valve setting	Adjust control valve with a pressure gauge
G - High control valve setting	Adjust control valve with a pressure gauge
H - Damaged control valve	Return control valve for authorised repair
I - Internal control valve leak	Return control valve for authorised repair
J - Internal cylinder leak	Return cylinder for authorised repair
K - Internally damaged cylinder	Return cylinder for authorised repair
L - Engine control out of adjustment	Return for authorised repair
M - Engine is loaded during idle down mode	Use shorter log length (24" or less) to allow engine to speed up before contact

MAINTENANCE, STORAGE AND ESSENTIAL CHECKS BEFORE USE

Before performing maintenance, the log splitter must be placed in maintenance mode.

To do so follow these steps:

1.) Turn off engine

2.) Move the control valve handle (4a) forward and backward to relieve **Hydraulic Pressure**.

After performing maintenance, make sure all guards, shields and safety features are put back in place. Failure to follow this warning can result in serious injury.

Essential checks before each use

What	When	How
Hoses	Each Use	Inspect for exposed wire mesh & leaks. Replace all worn or damaged hoses before starting engine.
Hydraulic Fittings	Each Use	Inspect for cracks & leaks. Replace all damaged fittings before starting engine.
Nuts & Bolts	Each Use	Check for loose bolts . Tighten before operating.
Beam	Each Use	Apply grease to beam surface
Moving Parts	Each Use	Clear debris

Storage

- Before storing, make sure the log splitter is clean and dry for years of trouble-free service.
- Lightly lubricate all log splitter surface and moving parts to prevent rust.
- Store indoors or protected area during severe weather and winter months.
- It is essential to fully retract axe head, ensuring no silver part of piston rod is exposed to the elements.

Oil Filter:

After the first 25 hours of operation, change the oil filter. There after every 100 hours of use or seasonally change filter.

Refer to engine manual for engine maintenance.



WARNING

Skin injection hazard.

High pressure fluid can inject under skin resulting in serious injury including amputation.

- Make sure all hose and control fittings are tight before applying pressure.


Relieve system pressure before servicing.

- Do not check for leaks with hand. Instead, place a piece of cardboard under the unit to check for leaks.

- If skin injection happens, seek immediate 'Surgical Treatment'. Call 000.

ENGINE COMPONENTS

1. Fuel Cap
2. Fuel Tank
3. Oil Drain Plug
4. Oil Filler Cap/Dipstick
5. P.T.O Shaft
6. Muffler
7. Spark Plug
8. Choke Lever
9. Fuel Valve Lever
10. Starter Grip
11. Recoil Starter
12. Air Cleaner

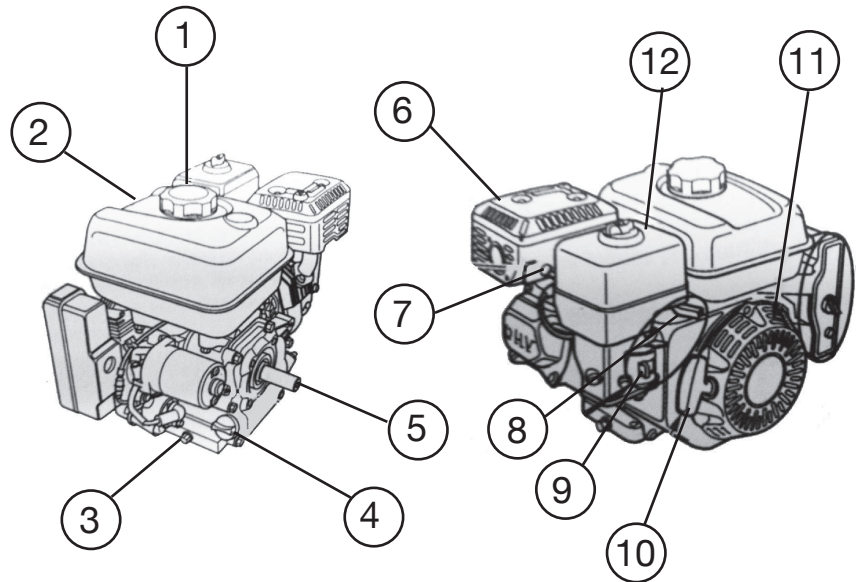

For more information on Engine Operation & Engine Maintenance please refer to engine manual supplied with the log splitter.

SPECIFICATIONS

Tested Splitting Force	30000kgs
Fastest Cycle Time	15 Seconds
Solid Splitting Wedge Size	20cm(8")
Hydraulic Tank Capacity.....	14 Litres
Max. Log Length	600mm (24")
Max. Log Weight.....	45kgs (100Lbs)
Coupler Ball Size	50mm
Tyre Size	40mm (16")
Max. Towing Speed.....	45 Km per hour
Cylinder Size	4 ¹ / ₂ " x 22 ³ / ₄ "
Max. Pressure	3500 psi
Hydraulic Fluid Type	10W-AW32 &/or 10W-AW46
Gear Pump	2 stage
Max. Flow Capacity.....	46.8 LPM
Control Valve	Detent (auto-return)

Overall Dimensions of the log splitter when horizontal

Weight	244Kg
Height	1.2mm (45")
Width	1.17 m
Length	2.23 m

Warranty and Service Information

Congratulations on the purchase of your new RedGum product. RedGum products assist you to complete the “job at hand” in an economical, safe and efficient manner.

This brochure explains the warranty and maintenance information for your product. This combined with your Owner’s Manual and the knowledge and expertise offered to you by your RedGum Dealer, should provide you with the confidence that your decision to purchase a RedGum product was a good one.

STATEMENT OF WARRANTY

This statement of warranty applies to RedGum products and has been offered by the RedShed. The RedShed provides warranty to the initial purchaser of this product (who has purchased it from the RedShed directly or an authorised RedGum dealer) for a period commencing from the date of purchase.

If the product is found to be defective, in the RedShed’s opinion (due to fault of the manufacturer) within the warranty period, the RedShed will carry out the repair or replacement to the customer Free of charge, providing;

- The fault is reported directly to the RedShed or place of purchase.
- Proof of purchase is provided.
- The fault is not caused by misuse, neglect or incorrect adjustment by the user.
- The failure has not occurred through normal wear and tear.
- The product has not been serviced, repaired or alterations made by any one not authorised by the RedShed.

Warranty Information

Please note down for future reference

RedGum Products

RedGum Splitter Model:

RedGum Deluxe Logsplitter

Date of Purchase:.....

Serial Number:.....

Purchased from:.....

The manufacturer reserves the right to make improvements in design and/or changes in specifications at any time without incurring any obligation to install them on units previously sold.

WHAT IS NOT COVERED BY WARRANTY

The following items are not covered by this warranty;

- Normal maintenance items which become worn through use, including, but not limited to, belts, blades, oil, blade adapters, filters, rewind springs, spark plugs, starter ropes, clutches and sprockets.
- Natural discoloration of material due to sunlight.
- Engines not manufactured by RedGum, these items are covered by the respective original equipment manufacturers' warranty, all claims must be sent to the appropriate manufacturer's agents.
- Using stale or contaminated fuel in the product.
- Damage or failure caused by accident, misuse and/or neglect, including, ingress of dirt, abrasives, moisture, rust & corrosion, and damage due as a result of inadequate maintenance.
- Failure to operate or maintain the unit in accordance with the Owners/Operators manual, this handbook or instruction given by a RedGum dealer.
- Alterations or modifications that change the intended use of the product or affect the product's performance, operation, safety or durability, or causes the product to fail to comply with any applicable laws.
- Damage due to incorrect usage such as incorrect log placement as shown in the product's Owners Manual.
- Additional damage to parts or components due to continued use occurring after any of the above.

ITEMS FOR WHICH A CHARGE WILL BE MADE

The following list is a guide to the types of items for which a charge will be made (unless failure is caused by a defect in manufacturer materials or workmanship).

Service: Maintenance servicing and all parts and fluids replaced in line with the maintenance schedule shown in this handbook.

Mechanical Adjustments: Including engine tuning, adjusting brakes, belts & clutches, etc.

Drive System: Sprockets, belts, clutches, pulleys and bearings all wear and will require replacement.

Cutting Equipment: Blades, cutting discs and hammers wear during use and sharpening/replacement is required as a matter of normal maintenance.

Spark Plugs: Periodic replacement is required to ensure maximum engine performance and best fuel economy.

Induction/Combustion System: The removal of deposits and cleaning may be required from time to time and should be performed as necessary.

Tyres: Are subject to wear and with contact from external objects can cause deflation. A flat tyre is **not** a warrantable item.

External Surfaces, Paint, Trim and other Appearance items: Are affected by normal wear and tear and exposure to environmental conditions. A charge will be made for paint and trim items that require attention due to causes outside the manufacturer's control.

Hydraulics: Changing hydraulic fluids.

The frequency of replacement, repair or adjustment will depend mainly on where and how you use your product, weather, atmospheric and environmental conditions and frequency of use.

CUSTOMER RESPONSIBILITIES

The customer must provide to the Authorised RedGum Dealer proof of purchase information such as a receipt.

The product must exhibit reasonable care in the maintenance, operation, storage and general upkeep practices as explained in the maintenance section of the Owners/Operators Manual or this handbook. This includes the whole product or any general wear item or component on the product. Any costs incurred to obtain warranty consideration or services is the customer's responsibility, including shipping and handling, travel expenses, lost time, lost production or pickup and delivery.

YOUR RIGHTS AS A CUSTOMER

The New Product Warranty that is provided by the RedShed on RedGum products is in addition to the rights and remedies conferred on consumers by the relevant authorities and/or legislation. The warranty does not affect those rights or remedies, except to the extent that their application may lawfully be excluded.

Any consequential, direct or incidental loss or damage is not covered by the warranty. Any statutory or other rights or remedies available in connection with a claim for such loss or damage should be pursued separately.

NOTES

THE WARRANTY PERIODS

The warranty periods below commence on the date of purchase.

Customer	RedGum Splitter	RedGum Chipper
Private/Domestic	24 months	12 Months
Commercial	3 months	3 Months

NOTE:

- Engines are covered by the respective original equipment manufacturers warranty and claims are made direct to the manufacturer agent.
 - Replacement parts and accessories fitted during a repair under terms of warranty will enjoy cover for the remainder of the warranty period of the finished product.
 - Warranty claims may only be made through an Authorised RedGum Dealer.

WHERE TO GO FOR WARRANTY REPAIRS

Take your product to any authorised RedGum Dealer if it needs warranty repairs. All authorised RedGum Dealers will honour the New Product Warranty, and will repair, replace or adjust free of charge any part of your product that is defective in factory materials or workmanship. Please note that RedGum is unable to reimburse the cost of repairs carried out during the warranty period by a repairer other than an Authorised Servicing Dealer.

For your nearest authorised RedGum servicing dealer visit

www.RedGumProducts.com.au or Call Toll Free 1300 136 572

MAINTENANCE SCHEDULE

COMPONENT	L/S	C/S	Interval			
			1	2	3	4
Complete Unit	Yes	Yes	I	I	I/C	I
On Off Switch	Yes	Yes	I	I	I	I
Choke/Primer	Yes	Yes	I/A	I	I/A	I
Engine Oil	Yes	Yes	I	R	R	I
Throttle Lever	Yes	Yes	I	I	I	I
Cables and Connections	Yes	Yes	I/A	I	I/A	I
Fuel Filter	Yes	Yes	I	I	R	
Carburettor	Yes	Yes	T	T	T	
Air Filter	Yes	Yes	I	I	C/R	I/C
Clutch	No	Yes	I	I	I	
Spark Plug	Yes	Yes	I	I/C	R	I
Cooling Fins	Yes	Yes	I	I/C	C	C
Starter Cord	Yes	Yes	I	I	I	I
Starter Housing Vents	Yes	Yes	I	I/C	C	C
Spark Arrestor	Yes	Yes	I	I	I/R	I
All Screws, Nuts & Linkage	Yes	Yes	I	I	I	I

COMPONENT	L/S	C/S	Interval			
			1	2	3	4
Anti Vibration Mounts	Yes	Yes	I	I	I	
Hydraulic Oil	Yes	No	I	I	I/R	I
Hydraulic Oil Pump	Yes	No	I	I	I	I/A
Hoses	Yes	No	I	I	I	I
Hydraulic Fittings	Yes	No	I	I	I/C	I/C
Beam	Yes	No	I	I	I	I
Control Valve	Yes	No	I	I	I	I
Belts	No	Yes	I	I	I/A	
Blades	No	Yes	I	I	I/R	
Flails/Hammers	No	Yes	I	I	I/R	

LEGEND: L/S = Log Splitter, C/S = Chipper Shredder
 I = Inspect, T = Tune, R = Replace, C = Clean, S = Sharpen, A = Adjust, L = Lubricate

INTERVAL:

1 = Pre Delivery, 2 = First Service, 3 = Dealer Service, 4 = Every time the machine is used

DEALER SERVICE:

First service: 5 hours or 3 months (whichever occurs first)

Domestic Use = Every 12 months or 25 Hours (whichever occurs first)

Professional Use = Every 3 months or 100 Hours (whichever occurs first)

NOTES

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

RedGum Logsplitter Accessories Available

1.) RedGum Hydraulic Oil (Fluid 46 5L) - RRP \$49.75


High quality hydraulic oil fluid - ideal for topping up the log splitter's hydraulic reserve, when required.



2.) RedGum WorkTable & Heavy Duty WorkTable

Improves productivity by preventing split logs from falling to the ground. It also helps reduce the effort of picking up split logs that require further splitting.

WorkTable - \$99, Heavy Duty WorkTable - \$129 (pictured)

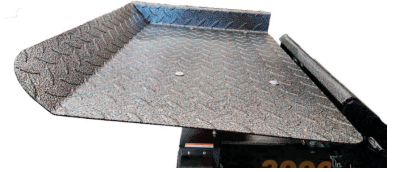

3.) RedGum Logsplitter Dust Cover - RRP \$99

Heavy-duty 200D logsplitter cover for superior protection against dust, dirt and heavy rain!



4.) RedGum Log Turn Table - RRP \$329

Our Patented Turn Table accessory fits all RedGum Log Splitters and allows for easy turning of heavy logs (for repeat splitting) when in vertical position.



5.) The Davis Starlifter - RRP \$289

Dual-purpose tool designed to lift and elevate logs off the ground to a more steady position for cutting. Also lifts T-posts vertically out of the ground.



BRAND NEW ACCESSORY - CHECK IT OUT!

RedGum Vertical Splitting Plate - RRP \$179

A new innovation by RedGum, this accessory is compatible with all non-lifter RedGum logsplitters. As an alternative to the Log Turn Table, this stationary plate makes vertical splitting of logs super simple and pain-free!



RedGum Products

For more information contact your local RedGum Dealer

Visit: www.RedGumProducts.com.au

Phone: 1300 039 251



Follow us on Facebook: www.facebook.com/redgumproducts